

Programing of Midland Weather Radio



Broadcasts are found in the VHF public service band at these seven frequencies (MHz): **Maury County highlighted in GREEN.**

162.400 162.425 162.450 162.475 162.500 162.525 162.550

NOAA Weather Radio Codes

TENNESSEE

Bedford	047003	Lewis	047101
Benton	047005	Lincoln	047103
Cannon	047015	Macon	047111
Carroll	047017	Marshall	047117
Cheatham	047021	Maury	047119
Clay	047027	Montgomery	047125
Coffee	047031	Moore	047127
Cumberland	047035	Overton	047133
Davidson	047037	Perry	047135
Decatur	047039	Pickett	047137
DeKalb	047041	Putnam	047141
Dickson	047043	Robertson	047147
Fentress	047049	Rutherford	047149
Franklin	047051	Smith	047159
Giles	047055	Stewart	047161
Grundy	047061	Sumner	047165
Hardin	047071	Trousdale	047169
Henderson	047077	Van Buren	047175
Henry	047079	Warren	047177
Hickman	047081	Wayne	047181
Houston	047083	White	047185
Humphreys	047085	Williamson	047187
Jackson	047087	Wilson	047189
Lawrence	047099		

Program Radio

Install 3 AAA Batteries and make sure button on right side is to the on position.

Step 1 – Push MENU

Using down button in the middle scroll to “ALT TYPE” then push the “select” button and using the down button again scroll to “voice” then press “select”.

Step 2 – Using down button again scroll to “Same Set” and press “select” [if they only want it set to hear 1 county scroll to single] to set for more than one county choose multiple.

Setting for multiple press “select” then choose “same 01” then using the up & down buttons enter the “CODE” for the county [right & left buttons move the cursor] then press “select”, scroll down to “same set 02” and repeat the process. Then press “menu” until you return back to “Same Set”.

Scroll down to “Channel” press “select” and using the up & down button until you get to the “frequency” for your area, then press “select” and exit by pressing “menu”.